

## PANTRY CABINET

### *SINGLE DOORS*

 


PC1584 / PC1594 (Width 15")  
PC1884 / PC1894 (Width 18")  
PC2184 / PC2194 (Width 21")

84" high (Bottom Door 49-1/2", Upper Door 29-1/2")  
94" high (Bottom Door 49-1/2", Upper Door 39-1/2")

\*Pull-out tray optional

- 3 hinges per door (bottom)
- 2 hinges per door (upper)
- 4 adjustable shelves

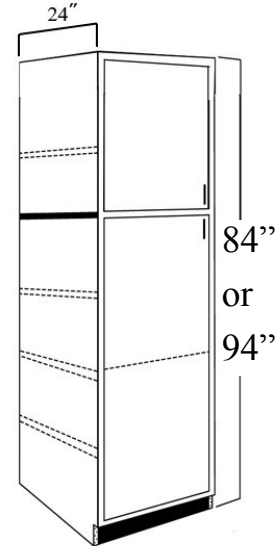

2 doors

## PANTRY CABINET

### *DOUBLE DOORS*

 


PC2484 / PC2494 (Width 24")  
PC3084 / PC3094 (Width 30")

84" high (Bottom Door 49-1/2", Upper Door 29-1/2")  
94" high (Bottom Door 49-1/2", Upper Door 39-1/2")

\*Pull-out tray optional

- 3 hinges per door (bottom)
- 2 hinges per door (upper)
- 4 adjustable shelves

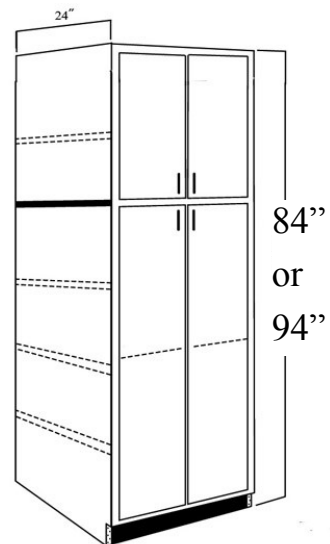

4 doors